


## CHIMERA WALL LAMP

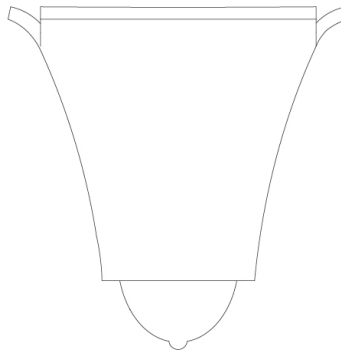

### HOW TO INSTALL YOUR NEW LIGHT

Please verify that all components are included before installation.

*If anything is missing, please contact us at:*

customer@studioebur.com  
www.studioebur.com


### CAUTION

Risk of fire or electric shock. Turn off power at the circuit breaker before installation. Installation must be performed by a licensed electrician. Do not exceed specified wattage. Use only specified bulb type.

## CHIMERA WALL LAMP


### PART A

Mounting assembly (mounting plate + mounting screws)  
x1

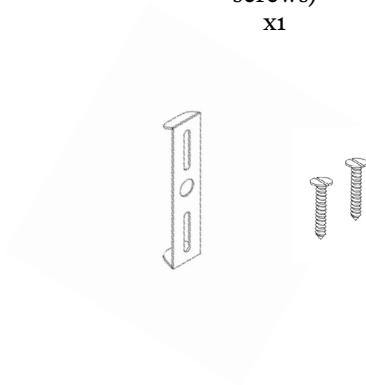

### PART B

Fixture (canopy + electrical assembly) + Canopy mounting screws  
x1

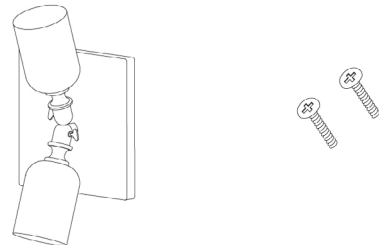

### PART C

UL-listed wire connectors  
x3




### PART D

L hooks  
x2




### PART E

Plaster shell  
x1

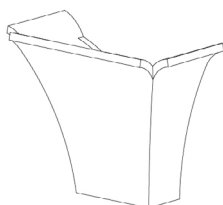

### PART F

 
Fabric shade  
x1



## CHIMERA WALL LAMP


### STEP 01

Switch off power at the main electrical panel before installation. Ensure the electrical connection point is properly installed and secured.

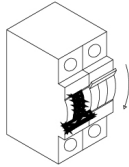


### STEP 02

Attach the mounting plate to wall junction box using the provided screws (Part A).

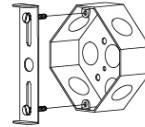


### STEP 03

Connect black to black (line/hot), white to neutral, and green or bare to ground using UL-listed wire connectors. Ensure all connections are secure and properly insulated.

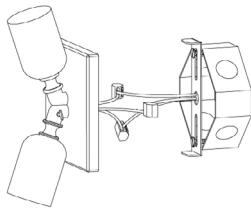


### STEP 04

 Attach the canopy to the mounting plate and secure it with the provided hardware (Part B).




### STEP 05

Mark the fixing points according to the measurements, then install the two L hooks (Part D) into the wall. Install the bulbs into the sockets.

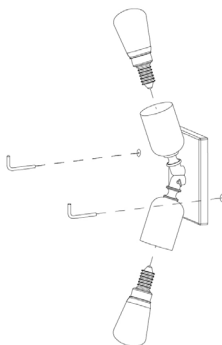

### STEP 06


Insert the fabric shade (Part F) into the plaster shell (Part E).

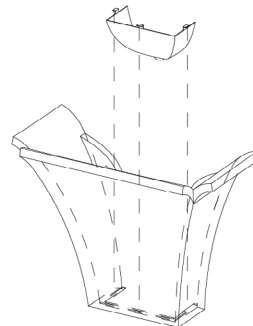

## CHIMERA WALL LAMP


### STEP 07

Attach the assembled plaster shell and fabric shade to the two L-hooks.

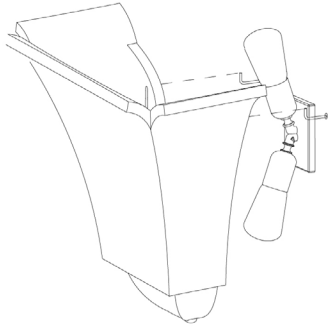

### STEP 08

Restore power at the circuit breaker and test the fixture.

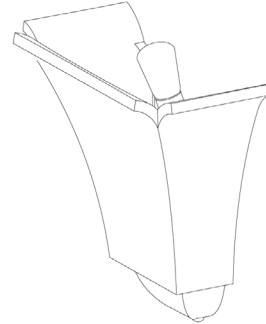

## CHIMERA WALL LAMP

### HOW TO CLEAN YOUR LAMP

Turn off power at the switch or circuit breaker before cleaning. Clean with a soft, dry cloth only. Do not use water or harsh cleaning products.

### FABRIC LAMPSHADE

To preserve the quality of the fabric, clean only with a soft, dry cloth. Do not use water, moisture, or harsh cleaning products.

### GOOD TO KNOW

For dimming, use a dimmable bulb with a compatible dimmer.

### SOLD SEPARATELY

Light bulb not included. Use one E26 LED bulb, 10W max, 2700K recommended.

### IMPORTANT NOTICE

This product is designed to meet applicable U.S. safety standards. Installation must be performed by a licensed electrician.

### END OF LIFE OF THE PRODUCT



This product must not be disposed of with household waste. Please dispose of it in accordance with local regulations and recycling requirements.